



aerpaw-tag

Project files for a non-canonical aerpaw deployment to power/read wilot tags and manage the aerpaw aerial drone

The drone will fly according to the plan show below

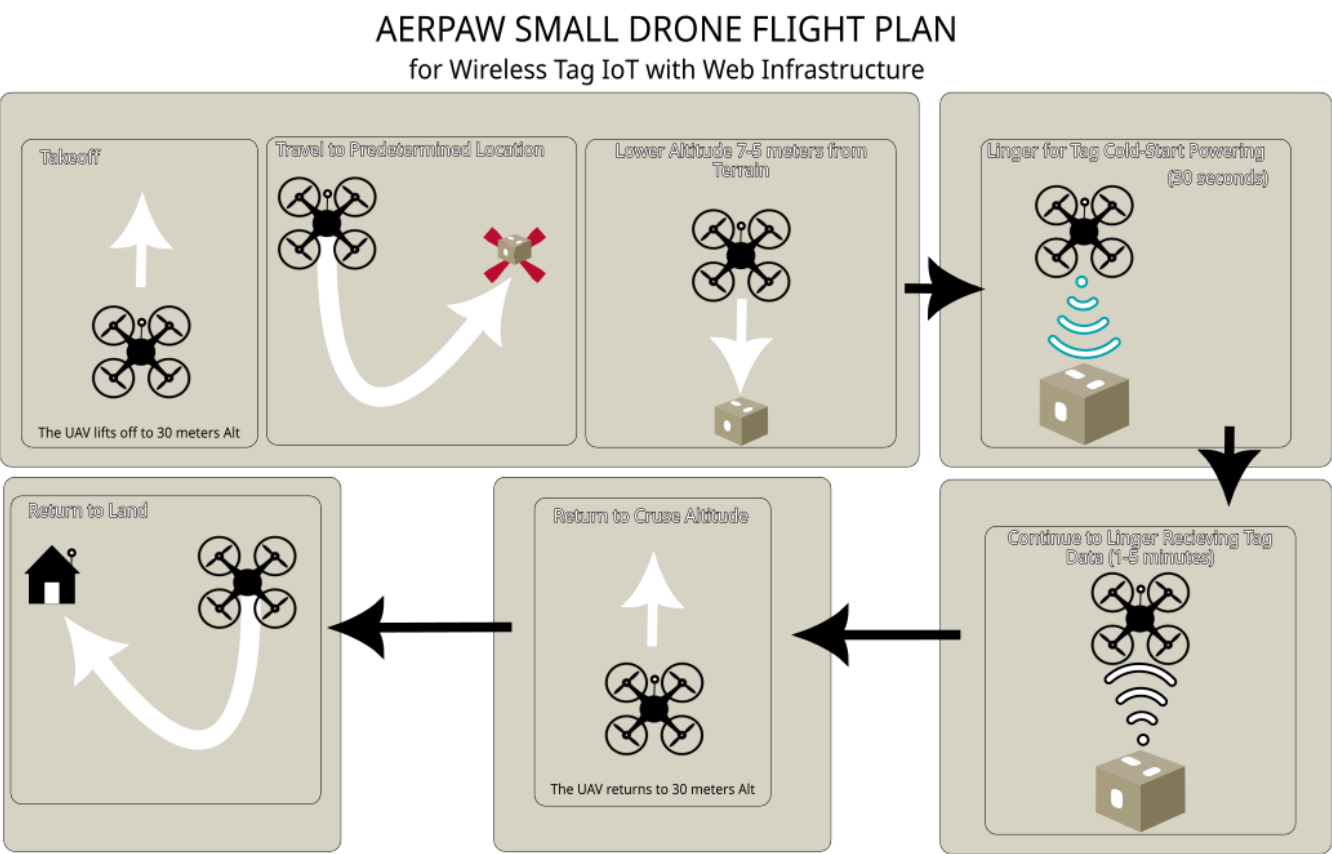


A system diagram is given below

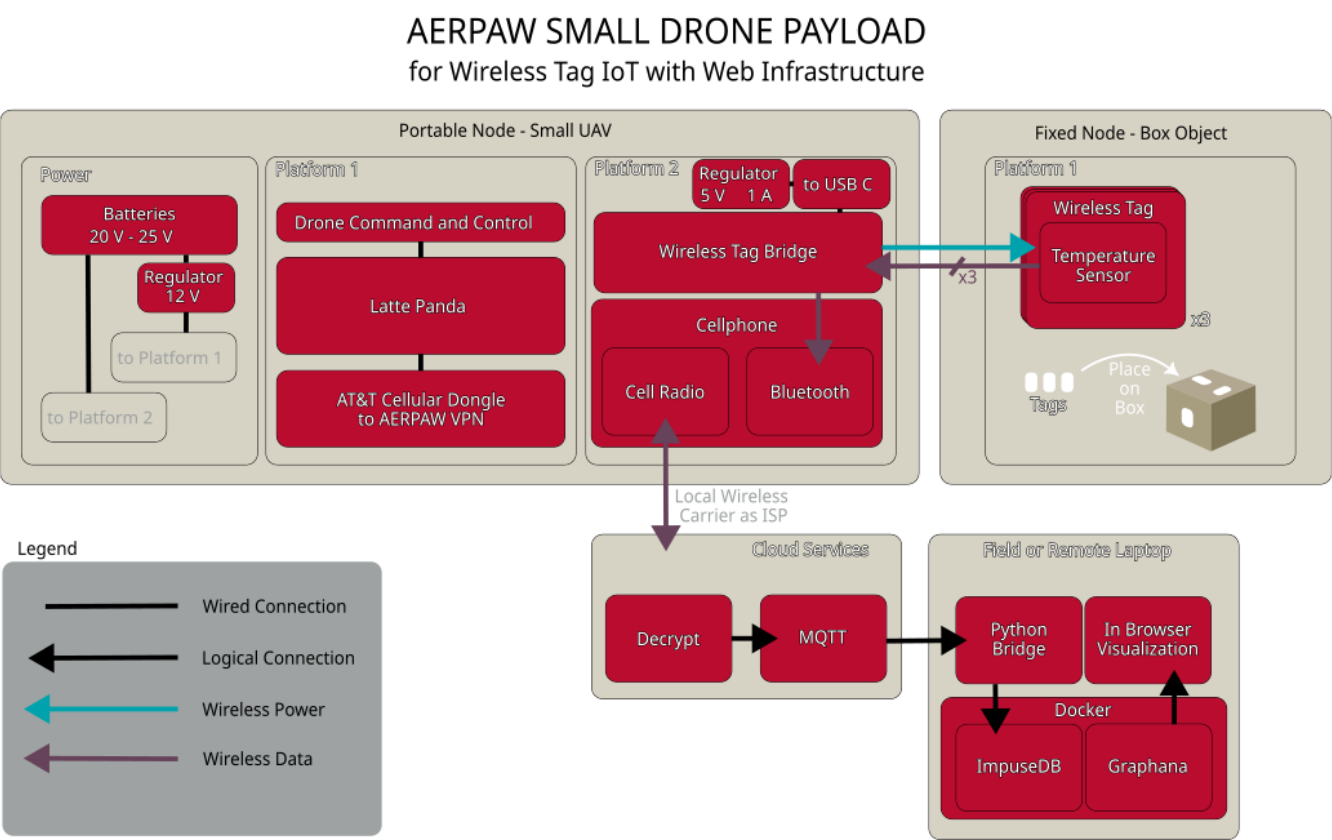


Phone payload loading instructions

Both the USB-C of the phone and the power for the buck converter should be on the same side.
Correct installation prevents erroneous phone button pressing during flight.

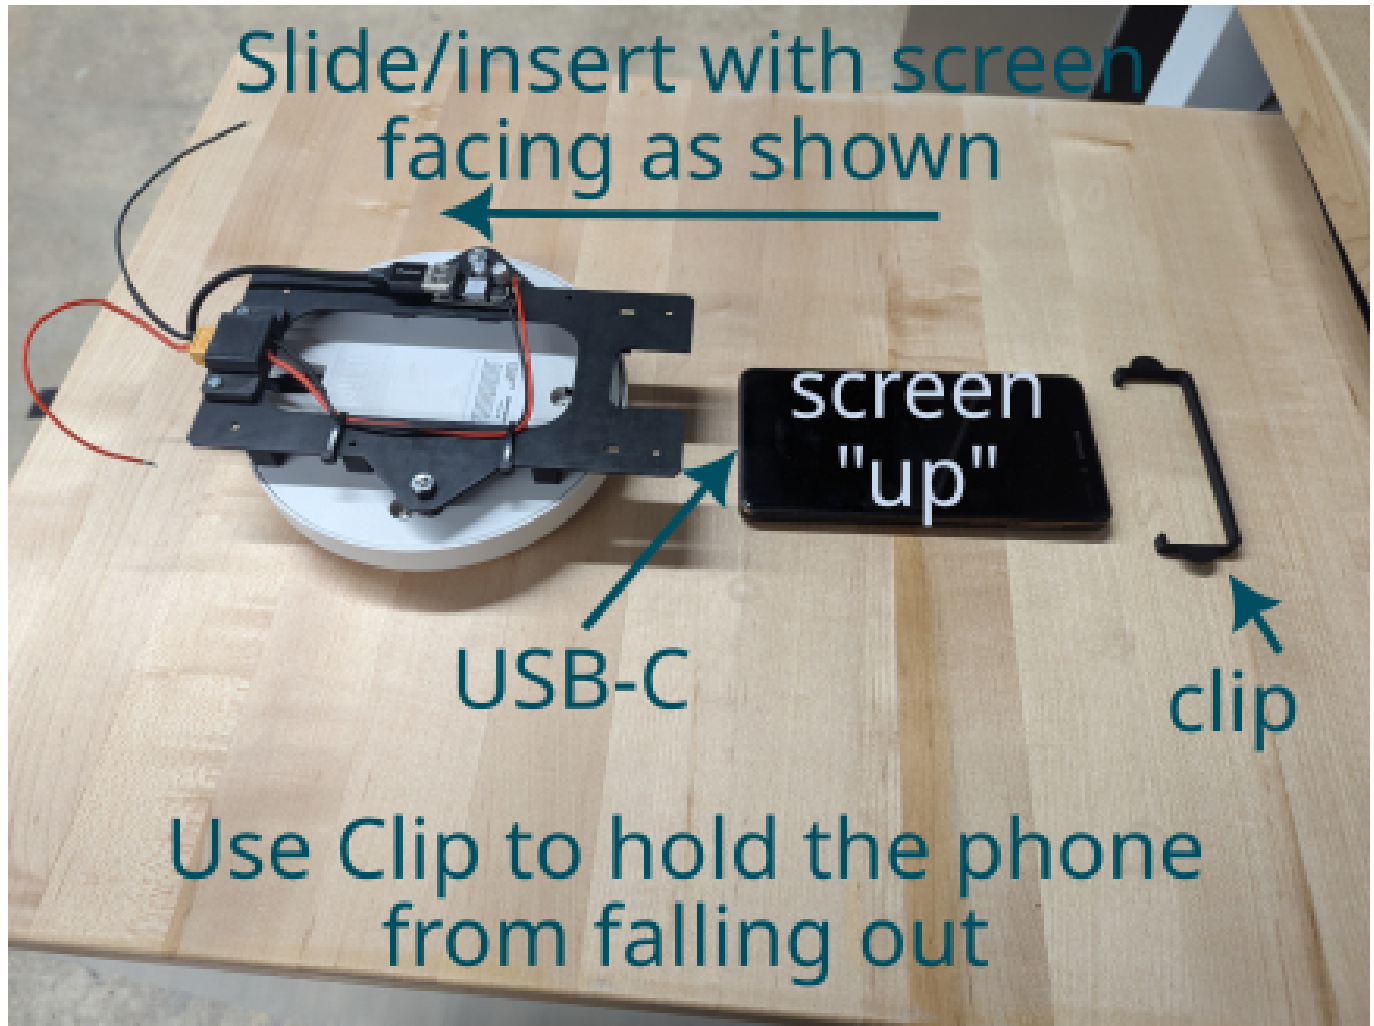


Phone gateway-bridge setup


Login with the provided credentials. The credentials are kept within the Google Keep app.

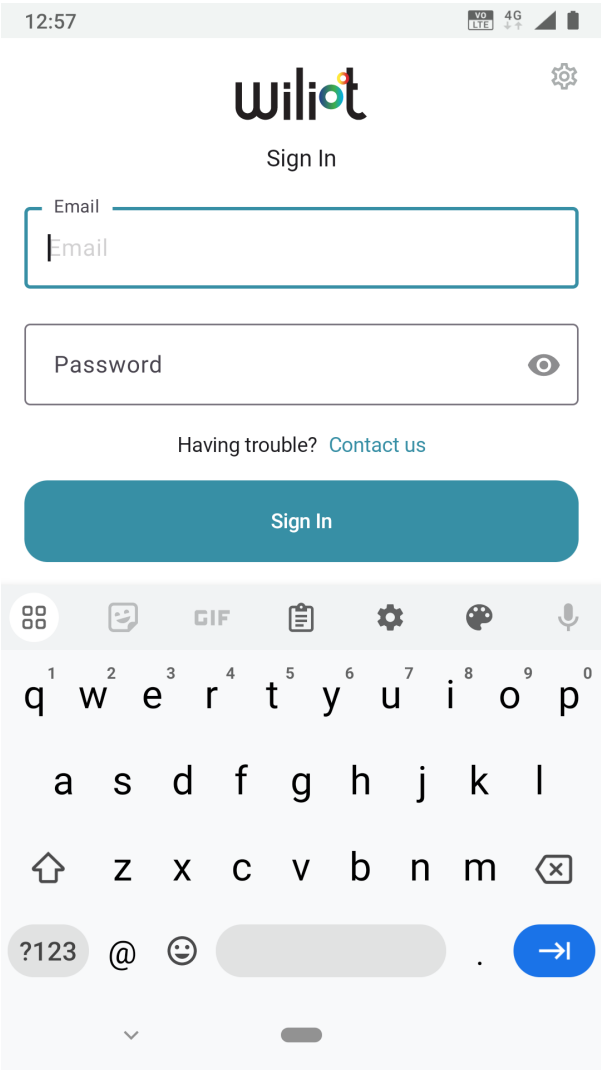

(if required) Use the gmail app to fulfill two-factor authentication.

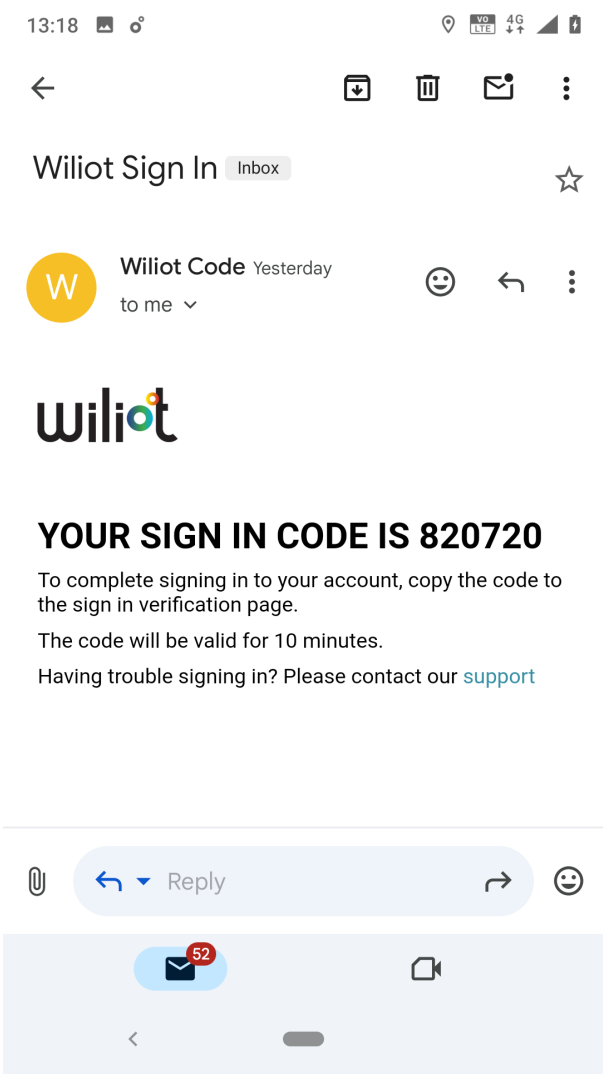

Ensure the gateway mode is turned on.

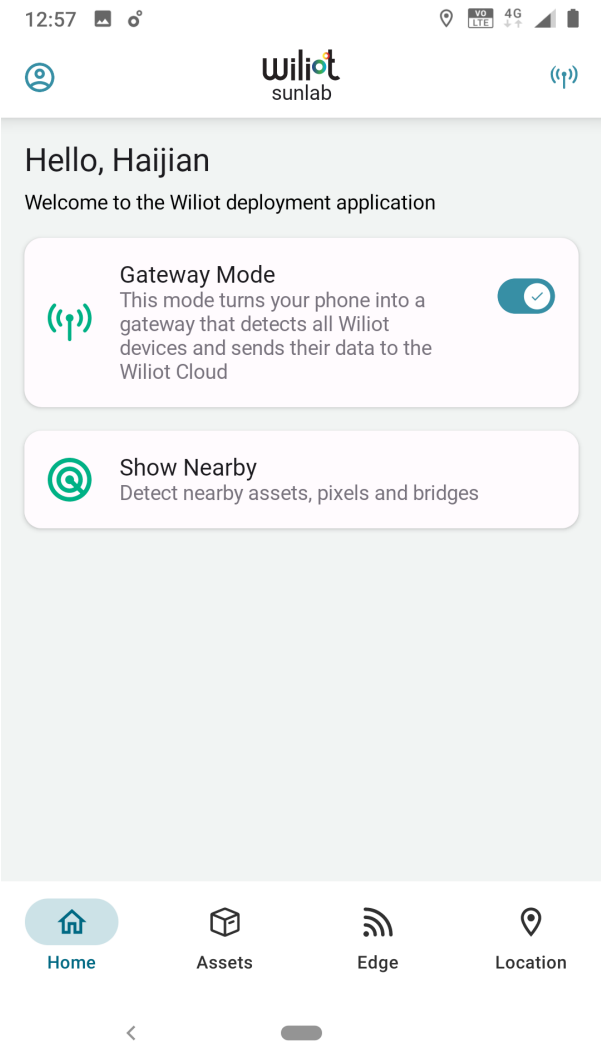

Check connectivity via MQTT

You may check if the setup is correct by viewing the data via MQTT.

Here is a simple webclient setup.

<https://www.hivemq.com/demos/websocket-client/>

Click **Connect** (no need to change anything)

Connection

Host

mqtt-dashboard.com

Port

8884

ClientID

clientId-13cEVSDyGX

Connect

Username

Password

Keep Alive

60

SSL

x

Clean Session

x

Last-Will Topic

Last-Will QoS

0

Last-Will Retain

Last-Will Message

Publish

Subscriptions

Messages

Once connected, click [Add New Topic Subscription](#)

Connection

connected

Publish

Topic

testtopic/1

QoS

0

Retain

☐

Publish


Message

Subscriptions

Add New Topic Subscription

Messages

Change the topic to **sunlab** and click **Subscribe**

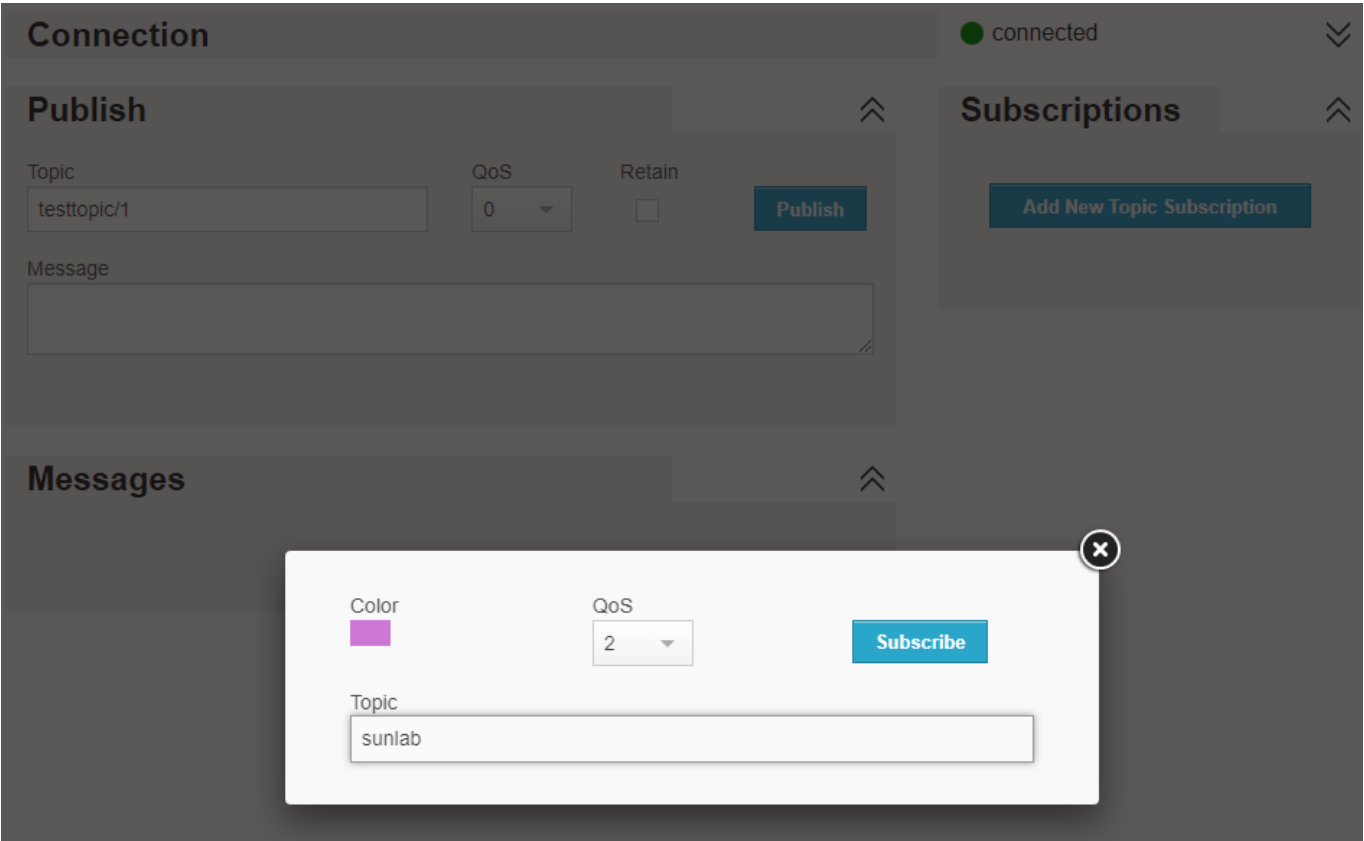

The first message show, but check to see if it is just a "retained" message.
A retained message does not show current connectivity.
You should see messages about activity and temperature when the tags are present.
(eg. The message shown below is an activity message stating that the tag is no longer actively being seen)

Connection

connected

Publish

Topic

testtopic/1

QoS

0

Retain

☐

Publish

Message

Subscriptions

Add New Topic Subscription

Qos: 2

sunlab

X

Messages

2024-10-17 18:41:46

Topic: sunlab

Qos: 1

Retained

sample_009aT0481 loose active 1729193034224 1729193034224

338836140582 0.95 0 1729193866297 [active:0,]